

Bonnet Nut Removal and Installation Tool


For use with 18³/₄-in TL offshore ram-type BOP

APPLICATIONS

- Support of bonnet nuts during assembly and disassembly
- Shop or in-field maintenance

ADVANTAGES

- Lightweight tool capable of being operated by one person
- Reduced risk of employee injury from handling nuts
- Easy access from either the right- or left-hand side of the bonnet

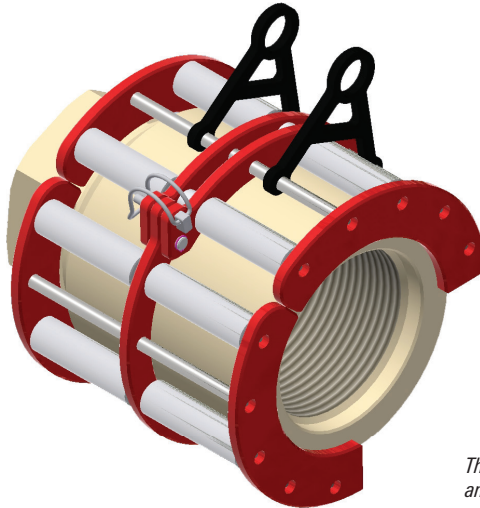

The TL offshore ram-type BOP bonnet nut removal and installation tool supports the bonnet nuts during assembly and disassembly.

Designed to support the weight of the TL* offshore ram-type BOP bonnet nut (weighing approximately 59 lbm [27 kg]) in a level position during assembly and disassembly processes, the bonnet nut removal and installation tool enables the operator to use both hands to turn the nut without having to support any of the weight.

The tool works in side-pull situations within the confines of the stack and also for direct line support in the shop. The tool prevents the occurrence of dropped bonnet nuts and helps reduce hand and finger injuries.